

AC010 Installation Guide

monit | rally


© Monit Limited



2 Button Hand Remote

AC010

Suitable for all types of vehicles.

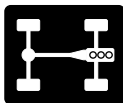

Installation

The Monit Hand Remote needs to be setup prior to operation. Please carefully follow the steps below.

Hand remote	
Button	Function
'A' Top button	Controls Auxiliary A
'B' Bottom button	Controls Auxiliary B

Step 1:

Select your remote options for your Monit G100+/G200+ in each of the Auxiliary A and Auxiliary B Settings as per the procedure below.

Note: It is essential that both Auxiliary A and Auxiliary B are set for both remote buttons to function.

1. Select the 'Settings' menu
2. Select 'Auxiliary A'
3. Scroll down to Auxiliary option you wish to use for button 'A' and press OK
4. Select 'Auxiliary B'
5. Scroll down to Auxiliary option you wish to use for button 'B' and press OK

Step 2:

Plug your AC010 2 Button Hand Remote into the loom of your Monit G100+/G200+. Installation is complete.

Trouble Shooting:

If the remote does not function as expected please follow the following steps to resolve the issue.

- Ensure that both Auxiliary A and Auxiliary B are set to the desired functions in the 'Settings' menu
- Check the wiring connections to ensure that the Monit loom and the hand remote cable are both in good condition

If your plugs have been cut off the loom or cable previously then you can wire the hand remote to the Monit G100+/G200+ as per the below table:

Hand Remote Wire	Monit G100+/200+ Wire
Blue	White
Brown	Brown
Black	Black

Contact Monit on info@monitrally.com for technical support if the above information does not resolve your issues.