



## PRESSURE SENDERS

THE MEMBRANE OF THE SENDER
IS ACTIVATED BY THE PRESSURE
OF THE MEASURED MEDIUM.
THIS MOVEMENT IS TRANSMITTED VIA
A LEVER SYSTEM TO THE SLIDING
SPRING. THE MAIN WIPER IS PASSED
OVER THE RESISTIVE COIL, SENDING
A PSEUDO-LINEAR VALUE TO THE
OUTPUT TERMINAL. ALSO INCLUDED
MAY BE A NORMALLY CLOSED SWITCH
WHICH CAN INDICATE A LOW RESSURE
CONDITION.

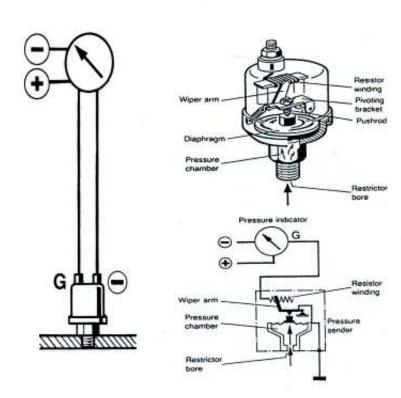

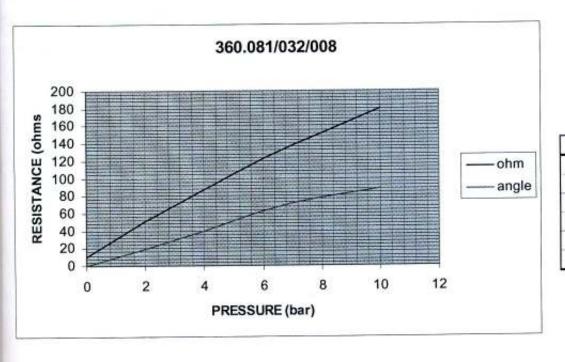

bar	ohm	angle
0	10	0
2	51	19
4	86	40
6	122	62
8	152	78
10	180	88

